

Contents

- 01 DCT200 data collection terminal
- 02 DCT200 power adapter and cable
- 03 Ethernet Cable
- 04 Installation Manual (printed on paper)
- 05 Wall Mount
- 06 19" 1U Rack Mounting Bracket

 /RetmonEms

 /retmondco

 /company/retmon-ems




Please scan the QR Code to
access the User Manual

www.retmon.com info@retmon.com
T. +90 (216) 392 16 42 F. +90 (216) 392 16 43
Aydintepe Mah. Sahil Yolu Cad. Alize İş Merkezi
No:191/103-A Tuzla/İstanbul




DCT 200

INSTALLATION MANUAL

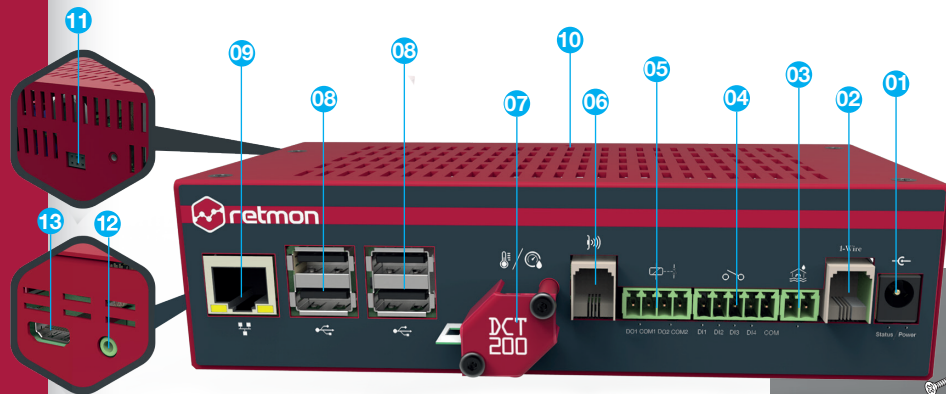


Wall Mounting

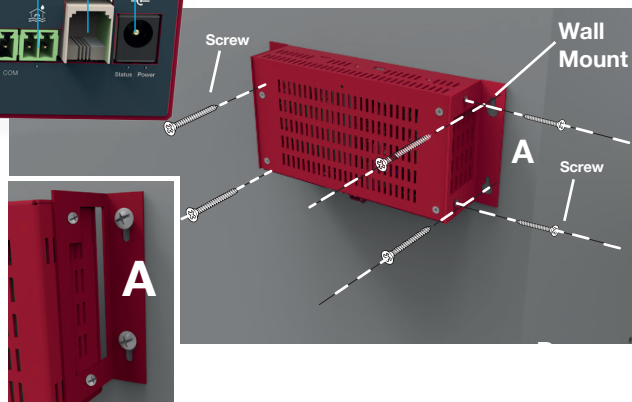

Connections


- 01 DC power connection
- 02 1-wire digital sensor port (RJ11)
- 03 Water leak sensor port (RJ11)
- 04 Digital input connections (DI1, DI2, DI3, DI4)
- 05 Digital output connections (DO1, DO2)
- 06 Infrared transmitter / receiver port
- 07 Temperature and humidity sensor
- 08 USB 2.0 Ports
- 09 10/100 Ethernet port
- 10 Button to return to factory settings
- 11 Backup battery port
- 12 Audio output 3.5mm
- 13 HDMI port

Cabinet Installation

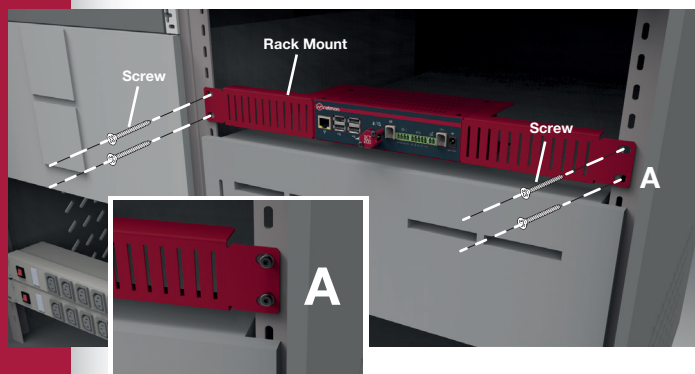


Access to the Application Interface

- Retmon DCT200 default IP address is 10.10.10.1 and the subnet mask is 255.255.255.0
- To access the retmon network interface from your PC, define '10.10.10.x/255.255.255.0

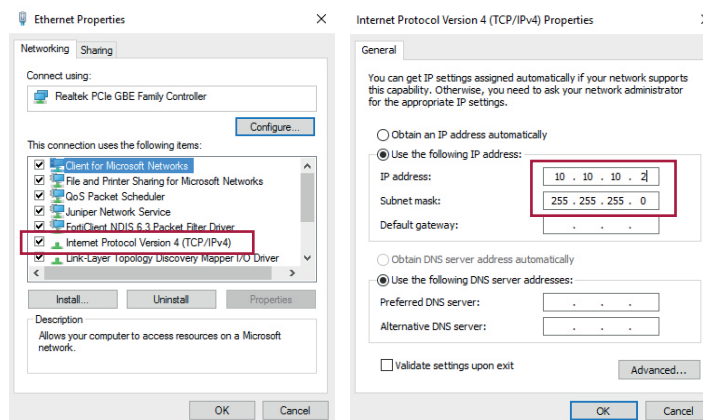


- Write down the DCT200 IP address into your Web browser (<http://10.10.10.1>) and press the Enter key

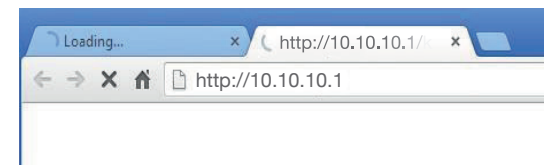

DCT200 Web Interface

User name: **Admin**
 Password: **admin**
 (Letters are key sensitive)

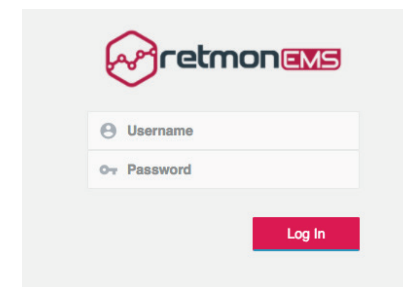

Reset your Username, Password and IP

- Hold the Reset button when the software is open.
- When the status light blinks 5 times release the reset button.

Restore Factory Settings

- Remove the DCT200 power connection
- By holding down the reset button, insert the DCT200 power cord
- Wait the status light which is on the DCT200 until it blinks 5 times
- Remove DCT200 power connection again and wait for a while then reconnect the power port