

Contents

- 01 DCT195 data collection terminal
- 02 195 power adapter and cable
- 03 Ethernet Cable
- 04 Installation Manual (printed on paper)
- 05 DIN Rail Mount





Please scan the QR Code to
access the User Manual

www.retmon.com info@retmon.com
T. +90 (216) 392 16 42 F. +90 (216) 392 16 43
Aydıntepe Mah. Sahil Yolu Cad. Alize İş Merkezi
No:191/103-A Tuzla/İstanbul



DCT 195

INSTALLATION MANUAL

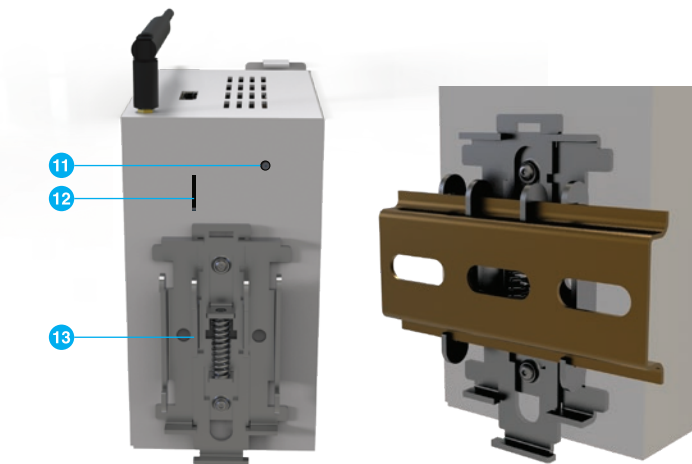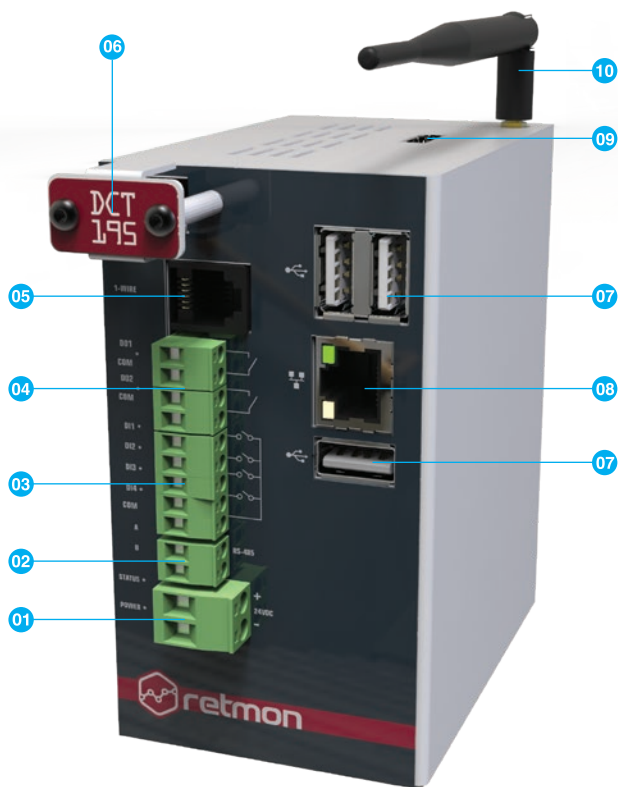


DIN Rail Mounting


- Clip the Data Collection Terminal to the DIN rail

Access to the Application Interface

- Terminal's default IP address is 10.10.10.1 and the subnet mask is 255.255.255.0
- To access the retmon network interface from your PC, define '10.10.10.x/255.255.255.0

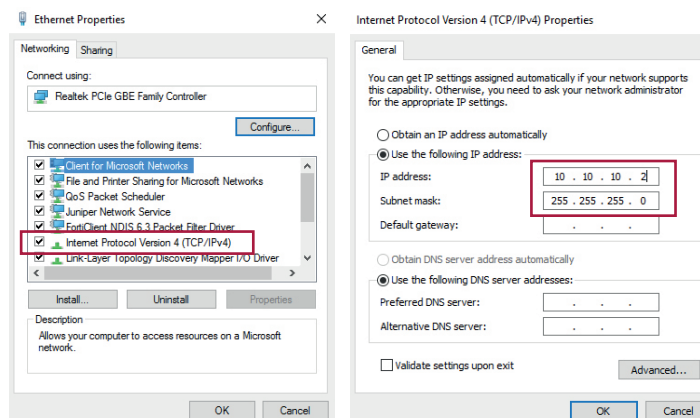


- Write down the Terminal's IP address into your Web browser (<http://10.10.10.1>) and press the Enter key

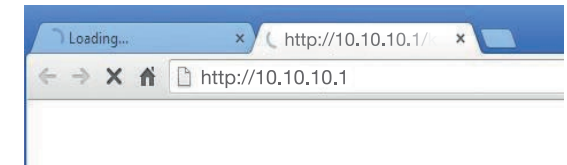

DCT195 Web Interface

User name: **Admin**
Password: **admin**
(Letters are key sensitive)

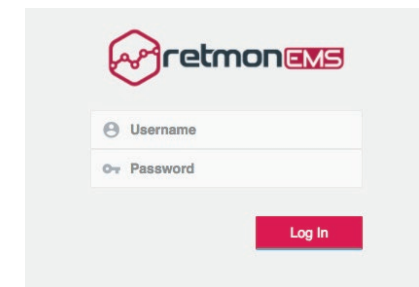

Reset your Username, Password and IP

- Hold the Reset button when the software is open.
- When the status light blinks 5 times release the reset button.

Restore Factory Settings

- Remove the Terminal's power connection
- By holding down the reset button, insert the Terminal's power cord
- Wait the status light which is on the Terminal until it blinks 5 times
- Remove Terminal's power connection again and wait for a while then reconnect the power port

- 01 24VDC power connection
- 02 RS-485
- 03 Digital input connections (DI1, DI2, DI3, DI4)
- 04 Digital output connections (DO1, DO2)
- 05 1-wire digital sensor port (RJ11)
- 06 Temperature and humidity sensor
- 07 USB 2.0 Ports
- 08 10/100 Ethernet port
- 09 HDMI port
- 10 Wi-Fi
- 11 Button to return to factory settings
- 12 Micro SD Card slot
- 13 DIN Rail mounting kit